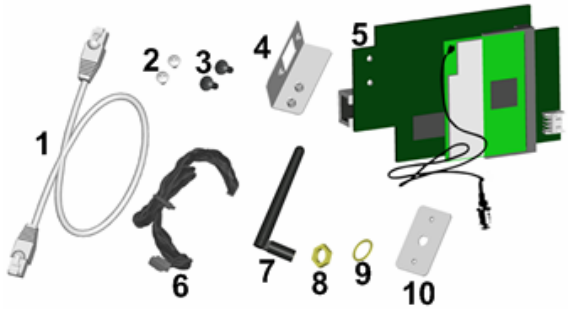
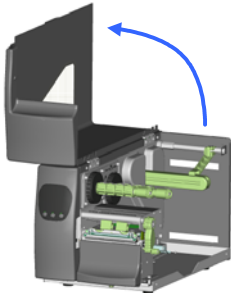
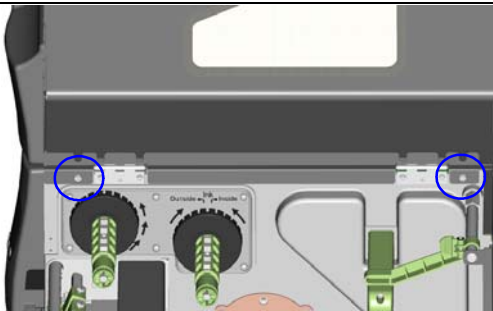
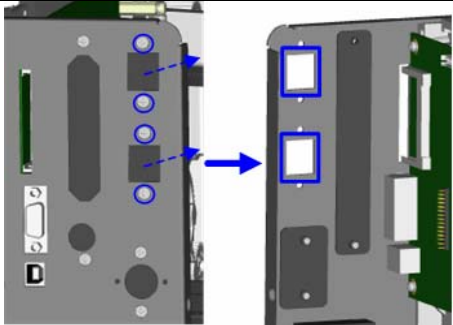
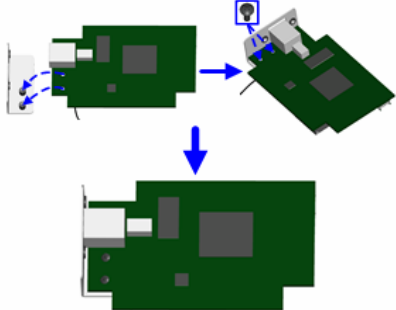
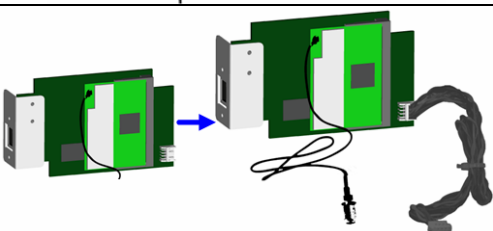
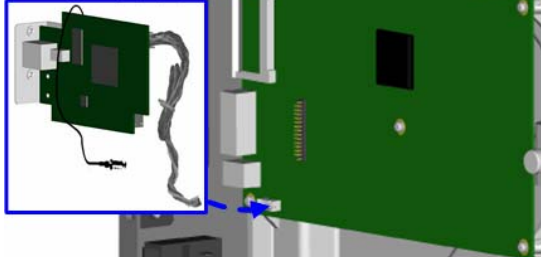
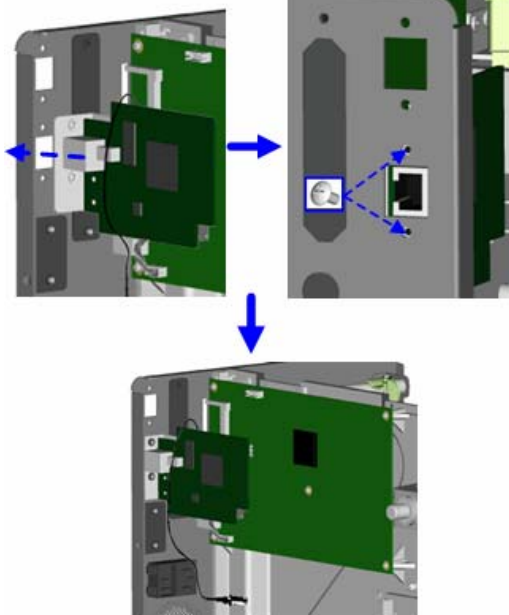
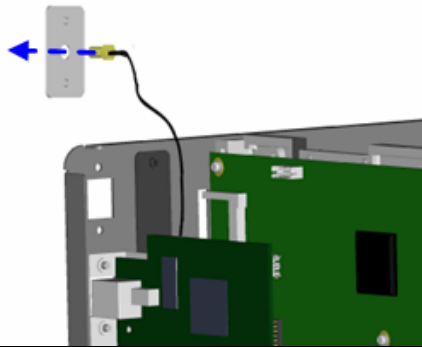
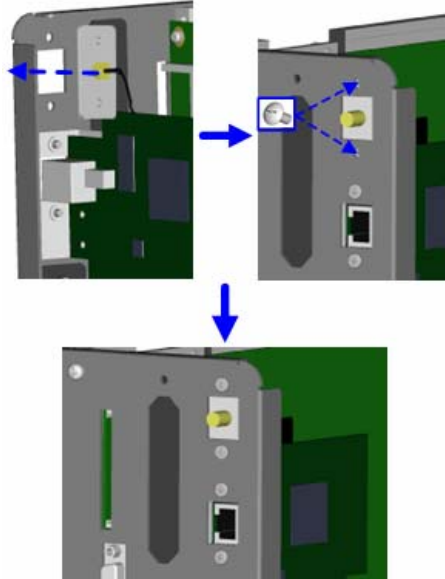
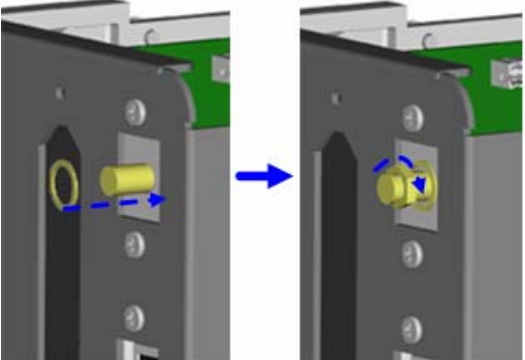
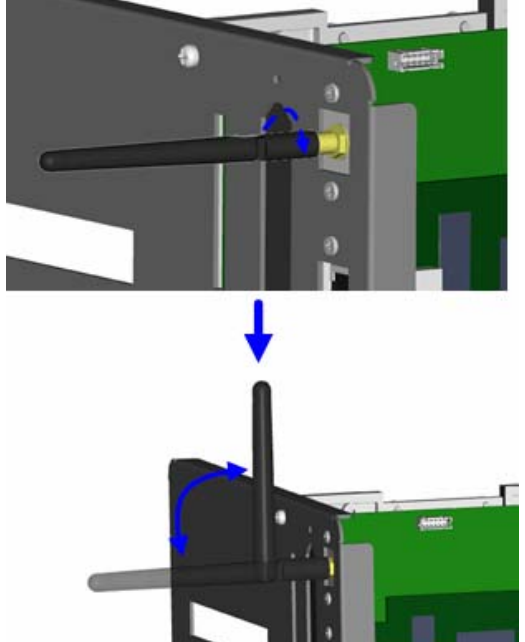


WLAN Module Installation for EZ-2000Plus / EZ-6000Plus Series

1	Ethernet Cable 1.8M 乙太網路纜線1.8M	
2	Secure Screw*2 模組固定螺絲*2	
3	Bracket Screw*2 支架固定螺絲*2	
4	Module Bracket 模組支架	
5	WLAN module WLAN無線網路模組	
6	Module Connection Wire 模組連接線	
7	WLAN Antenna 無線網路天線	
8	Nut (for Antenna) 天線固定螺帽	
9	Washer (for Antenna) 天線固定墊圈	
10	Antenna Bracket 天線支架	
1.	<p>Make sure the power is off and the power cable is unplugged. Place the printer onto a smooth surface and open the top cover.</p> <p>確定電源已關閉且將電源線自機器端拔除後，面對機器正面，掀起上蓋。</p>	
2.	<p>Remove the Left Top Cover from the printer.</p> <p>卸下左側主機外殼的固定螺絲，並將左側機器外殼拆下。</p>	
3.	<p>Remove the covers of Ethernet port and Antenna port from the back plate of the printer.</p> <p>拆下機器背板上的 Ethernet 及天線預留孔遮片。</p>	
4.	<p>Secure the WLAN module onto the bracket.</p> <p>將 WLAN 模組鎖在模組支架上。</p>	
5.	<p>Plug the connector into the socket on WLAN module.</p> <p>將內附的模組連接線一端先插入 WLAN 模組上的連接插座。</p>	

<p>6. Connect the other end of Module Connection Wire to the main board. 將模組連接線的另一端插在主板上的連接座。</p>	
<p>7. Mount the WLAN module and secure it onto the back plate. 將鎖好支架的 WLAN 模組固定在機器上並鎖上螺絲。</p>	
<p>8. Thread Antenna Connection Wire through the hole on the Antenna Bracket. 將天線連接線接頭穿過天線支架上的洞。</p>	
<p>9. Mount the Antenna Connection Wire and Antenna Bracket on the back plate and secure it with screws. 將天線支架連同天線連接線鎖上螺絲固定在機器背板上。</p>	

<p>10. Put the Washer first and then tighten the Nut on the Antenna Connection Wire.</p> <p>將天線固定墊圈置入天線接頭後再將天線固定螺帽鎖上。</p>	
<p>11. Turn the Antenna according to the direction as arrow showed to mount it on the Antenna Connection Wire. The angle of Antenna can be adjusted if needed.</p> <p>將天線依箭頭指示方向旋入天線接頭上後固定，天線亦可視使用情況改變角度。</p>	
<p>12. Reassemble the Left Top Cover to complete the installation.</p> <p>裝回機器外殼並鎖上螺絲後即可完成 WLAN 模組安裝。</p> <p>Note 1: After the WLAN module installation is completed, please send the "^XSET,USBETHERNET,1" printer command to printer for activating the Ethernet connection function. Please mind that USB port will be deactivated once the Ethernet connection function is activated.</p> <p>注意 1: 完成WLAN模組安裝後，請傳送印表機命令「^XSET,USBETHERNET,1」至印表機，以啟動Ethernet模組功能。Ethernet模組功能啟動後USB埠連線功能即被取代，無法再使用。</p> <p>Note 2: The first time setting operation must be performed with Ethernet (wired) connection before you can access wireless network.</p> <p>注意 2: 請先以Ethernet連線完成無線網路的首次設定後，即可開始使用WLAN模組的無線傳輸功能。</p>	